


Handheld Remote Settings

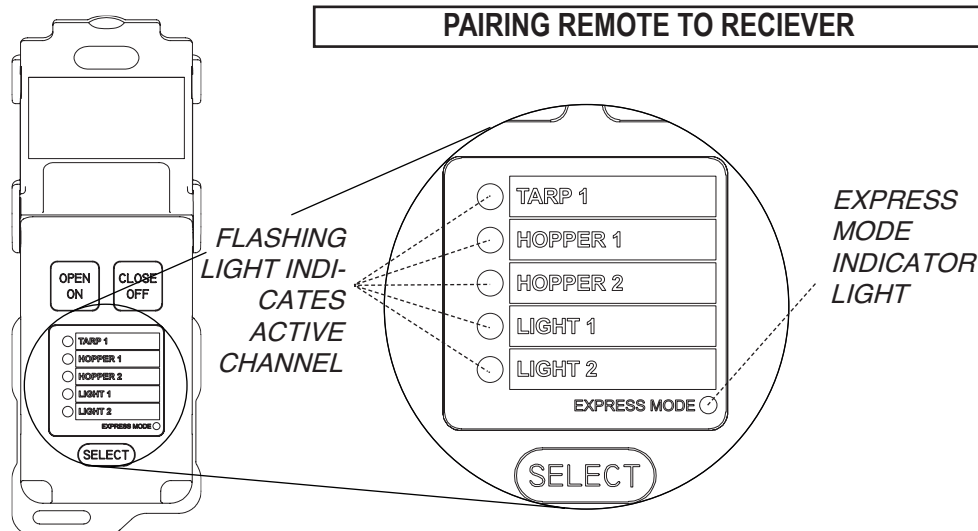

STEP 1: Make sure the ShurLink control box is connected to the power source.



INFORMATION



ALL LIGHTS FLASHING ON THE HANDHELD REMOTE INDICATE LOW BATTERY LEVEL. CHANGE BATTERIES BEFORE PAIRING THE REMOTE TO CONTROL BOX.

STEP 2: Press and hold both OPEN and CLOSE buttons located on the ShurLink control box simultaneously until you hear an audible beep from the control box (approximately 3-5 seconds). After you hear the beep, the control box will be in pairing mode for 30 seconds searching for the handheld remote.

STEP 3: While being near the ShurLink control box. Open the lid on handheld remote and press and hold both OPEN and CLOSE buttons simultaneously until light on the selected channel stops flashing and is constantly lit. This will mean the handheld remote is in pairing mode.

NOTE: Before putting the remote into pairing mode you can use the SELECT button to choose which channel you want to pair the control box to.

STEP 4: Successful pairing will be confirmed by an audible double beep from the control box.

TOGGLE EXPRESS MODE

STEP 1: Hold SELECT on the handheld remote until a solid light is displayed on one of the channels.

STEP 2: Cycle to the desired channel using the OPEN ON button.

STEP 3: Press the SELECT button to toggle EXPRESS MODE (the indicator will light up while express mode is on).

DISBALE CHANNELS

STEP 1: Hold SELECT on the handheld remote until a solid light is displayed on one of the channels.

STEP 2: Cycle to the desired channel using the OPEN ON button.

STEP 3: Press the CLOSE OFF button to disable (the active channel indicators will light up for active channels only once all channels have been cycled through).