


REPLACING A TRANSMITTER IN THE RECEIVER

ERASE TRANSMITTER – The first step is to 'delete' the Transmitter (TX) already programmed into the Receiver (RX). This is done by:

- a) Press & hold down the Function Button (Left button) for about 6 seconds until the red LED light goes out. (The single red LED should not be flashing).

(FUNCTION BUTTON) (RED LED LIGHT)

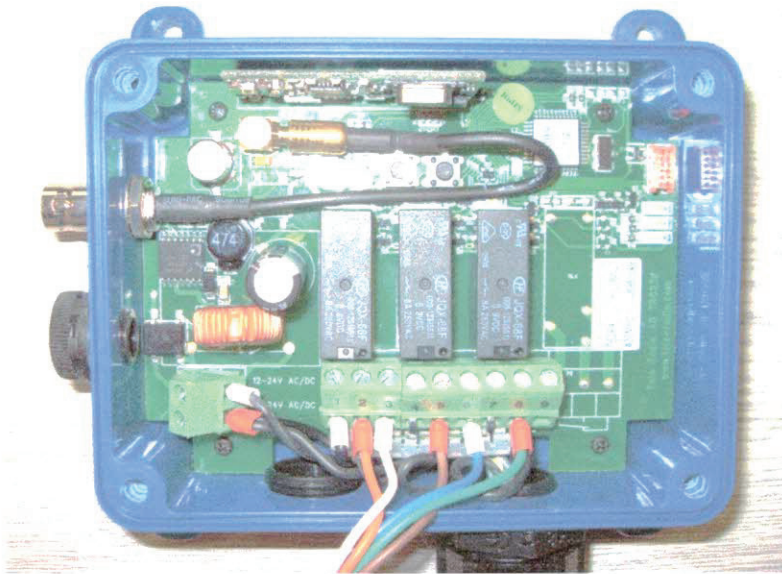

PROGRAM NEW TRANSMITTER

To program a new TX into the RX, follow the instructions below.

In the Receiver:

- a) Press & release the Function Button A (Left Button) once. (Red LED lights)
- b) Immediately (after turning the transmitter on) press & hold down the left button on the transmitter for approximately 3 seconds. (You should now have the single red LED flashing twice and TX will be co-programmed with the RX).

(FUNCTION A BUTTON)

