



## REPLACING A PNT-7163 TRANSMITTER

- Turn on the Transmitter - Press & Release the centre “” function button  
*The top centre green LED will now be flashing*
- When within range of the Receiver, turn the power from “Off” to “On”  
*The Receiver goes into REGISTER MODE for 10 seconds*
- Within this 10 second window of powering up the Receiver, press and hold down the OPEN “” and CLOSE “” function buttons together for 5 seconds.  
*The new Transmitter will now be stored & the old Transmitter will have been removed*

***NB If you have stored a Transmitter from another Receiver, this Transmitter will now operate BOTH Receivers. If you do not want this to happen, you will need to ERASE the Transmitter from the original Receiver.***