

Teleradio Panther

Remove transmitter / add transmitter

1. Disconnect all connected radio transmitters

- Remove the cover of the receiver
- Press and release button 1
- Press and hold button 2 for at least 5 seconds
- All LEDs start to flash red and turn off again
- All transmitters are disconnected

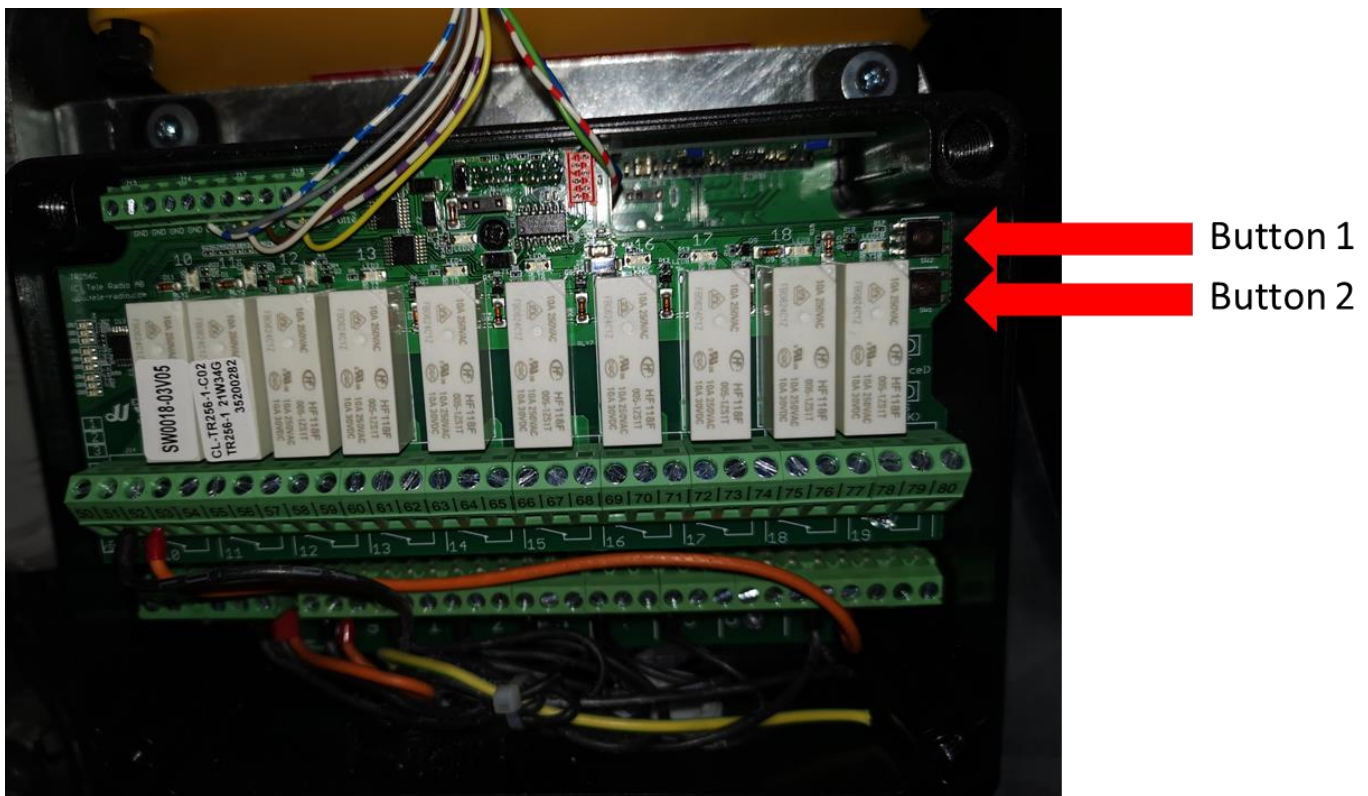


Figure 1: PCB inside the receiver

2. Connect new transmitter

- Remove the cover of the receiver
- Press and release button 1
- Press and release button 2
- Press key 1 and 2 on the new transmitter for 5s

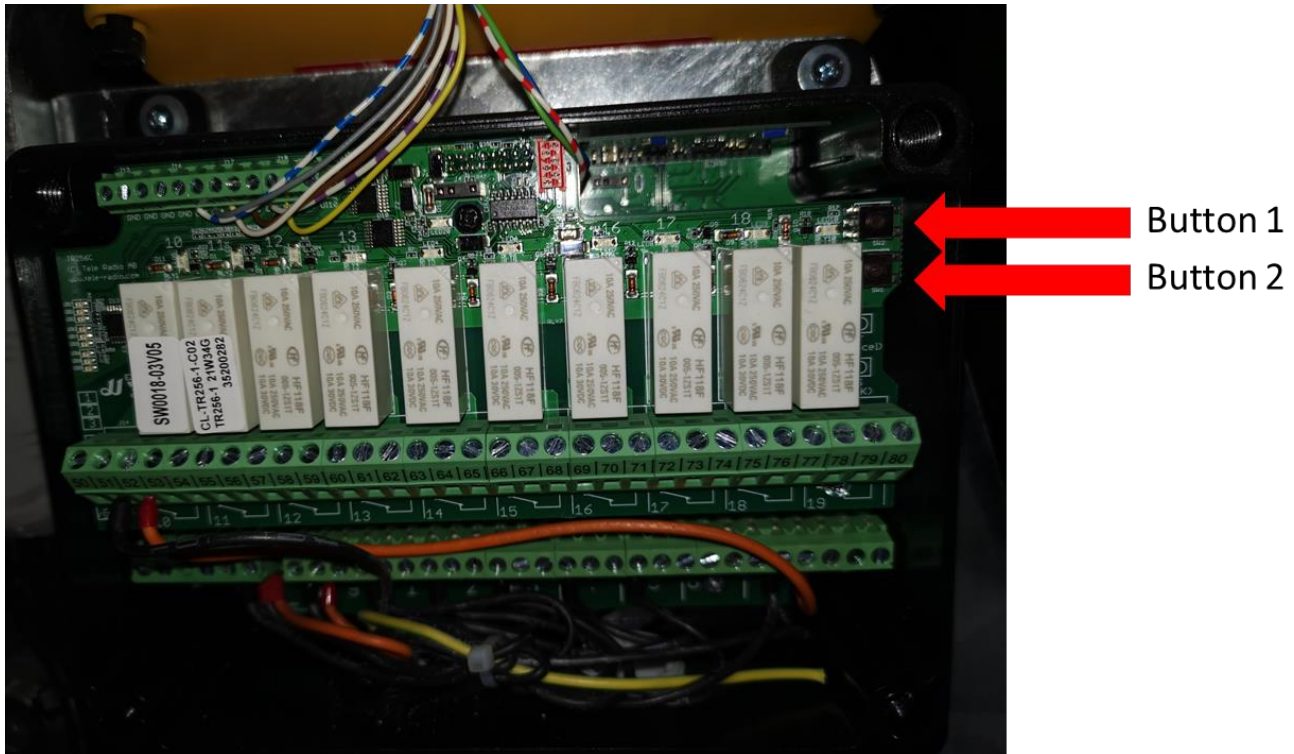


Figure 2: PCB inside receiver



Figure 3: transmitter

