



Engine Control Sequence

1. Flick toggle switch up to on position. Panel will turn on.
2. Select Tortoise (1500rpm) or Hare (1800rpm). Press Enter.
3. Engine is now ready to start. Press Green button.
4. Engine will start at 1100rpm (idle). Countdown will begin from 20-0.
5. After countdown has ended press Enter. Engine will rev to selected speed.
6. Engine revs in 5 rpm increments. If 1500rpm has been selected, speed can range from 1425-1575rpm. If 1800rpm has been selected, speed can range from 1725-1875rpm.
7. To stop engine, press Red button. Engine will go to 1100rpm (idle) to cool. Timer will countdown from 10 seconds. Once timer is complete flick toggle down to turn off power.